


SERIES 600 ELECTRONIC DOOR CLOSER FIG.1

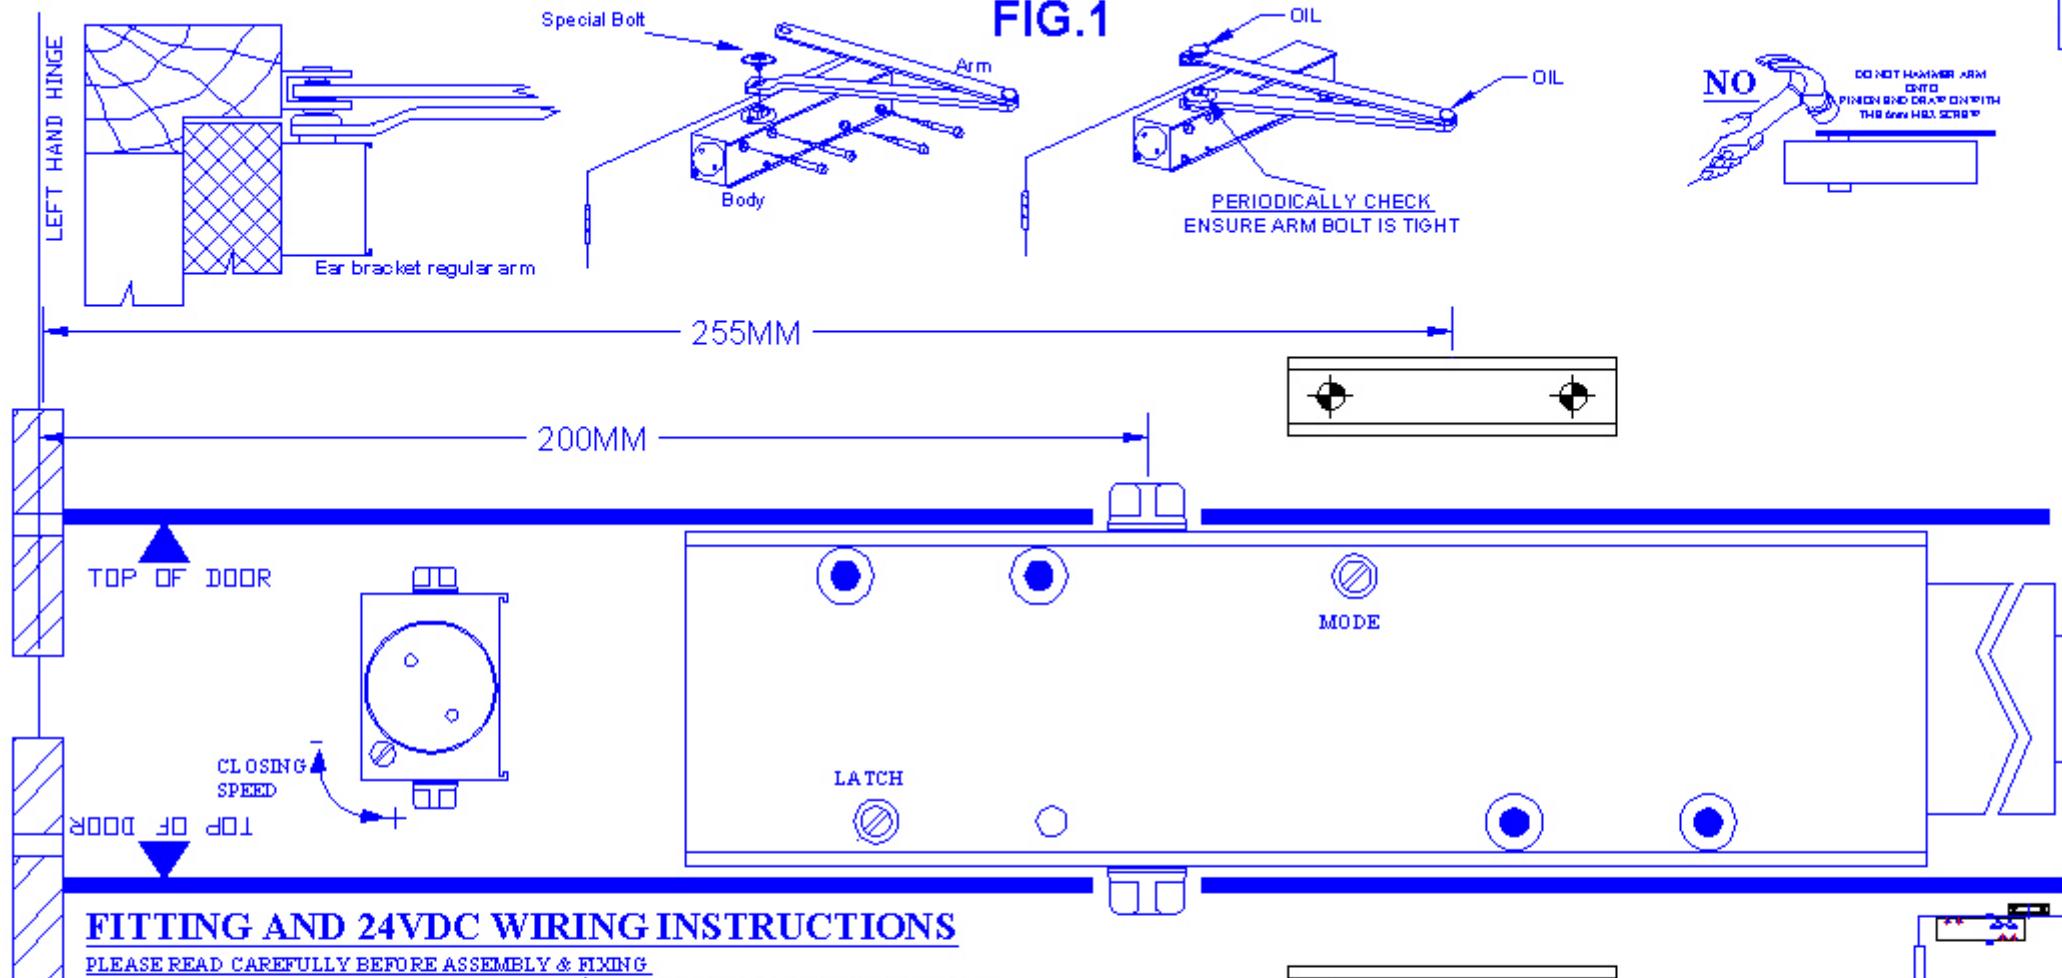

FITTING AND 24VDC WIRING INSTRUCTIONS


PLEASE READ CAREFULLY BEFORE ASSEMBLY & FIXING

1. Using the template to position the arm bracket, drill 2 pilot holes . Using the 2 * 1" wood screws secure the arm bracket. Centre line of the bracket to hinge should be 255mm.
2. Still using the template, drill 4 pilot holes and screw on the door closer body using the 4 * 2½" wood screws to secure the closer. Centre line of body to centre line of the hinge is 200mm.
3. Fit the arm to closer using the fitting supplied. Fit arm to bracket using nylon bush, arm pin and starlock washer.
4. Set door and latching speed, do not turn screw door speed and latching adjusters from fully closed more than 1 1/2 turns.
5. The mode selector screw should be unscrewed 1 1/2 turns from closed (regular application).

WIRING INSTRUCTIONS



PLEASE NOTE THIS CLOSER IS 24VDC

1. Screw the terminal box onto the door frame at approximately the same height as the closer body.
2. Holding the cover, carefully thread the 2 wires thru the hole nearest to the door hinge and secure the armoured loop with the nut supplied.
3. Attach the 2 wires from the junction box (the wires you have just put thru the cover) to the 2 wires coming out of the coil at the back end of the closer (polarity is not important).
4. Connect your 24VDC supply to the switched junction box.
5. Switch the supply on and test. (Note : make sure the switch on the junction box is in the on position before testing).
6. Periodic maintenance is very important, making sure body and arm are secure, and oiling the arm joints regular.


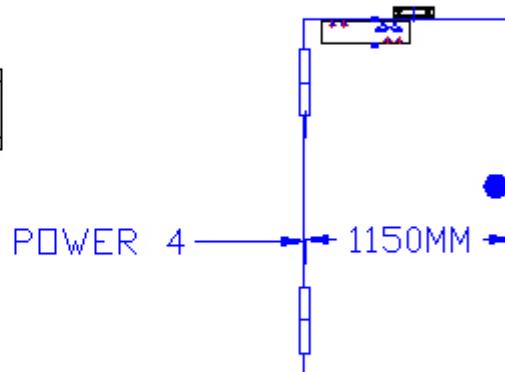


SERIES 600 ELECTRONIC DOOR CLOSER FIG.6



LEFT HAND HINGE

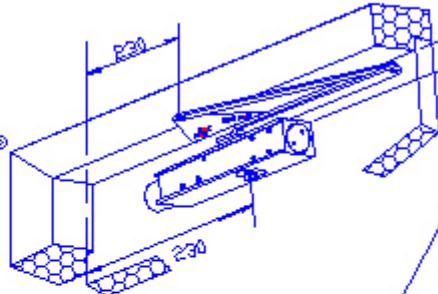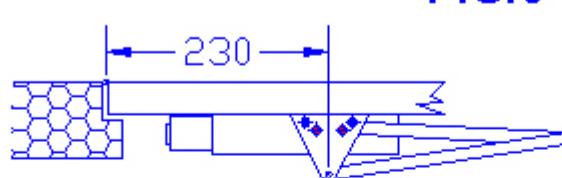

SOFFIT PLATE

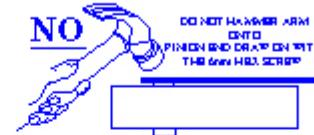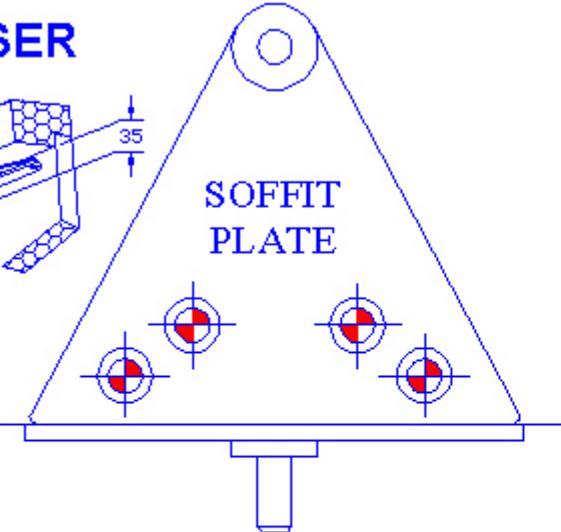

▲ FOLD UP 90° ▲

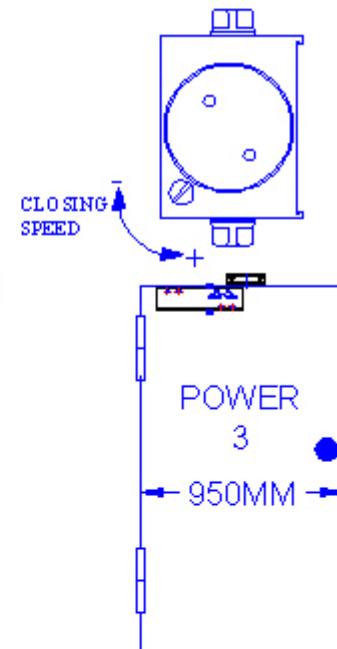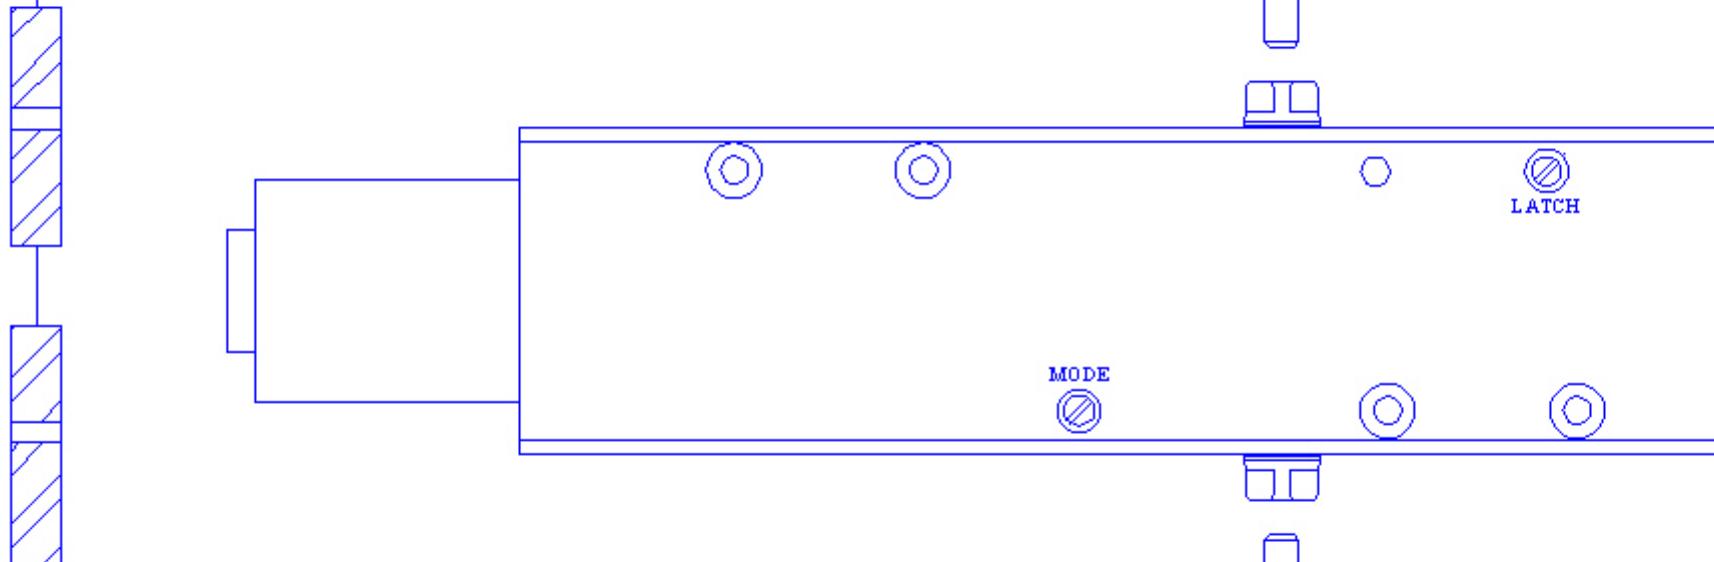

▼ .06 FOLD UP ▼

FITTING AND 24VDC WIRING INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE ASSEMBLY & FIXING

1. Using the template (folded as shown) position the soffit plate, drill 4 pilot holes . Using the 4 1" wood screws secure the arm bracket. Centre line of the bracket to hinge should be 230mm.
2. Still using the template, drill pilot holes and screw on the door closer body. Centre line of pinion should be 230mm from door hinge.
3. Fit arm to closer using fitting kit supplied. fit arm to bracket using nylon bush, and starlock washer.
4. Set door and latching speed, do not use door speed and latching adjusters from fully closed more than 1.1/2 turns.
5. The mode selector screw should be screwed in (parallel application).


WIRING INSTRUCTIONS SAME AS REGULAR ON THE REVERSE SIDE OF THIS TEMPLATE

PLEASE NOTE THIS CLOSER IS 24VDC

WHEN CLOSING USE SWITCH SUPPLIED.

RIGHT HAND HINGE


SOFFIT PLATE

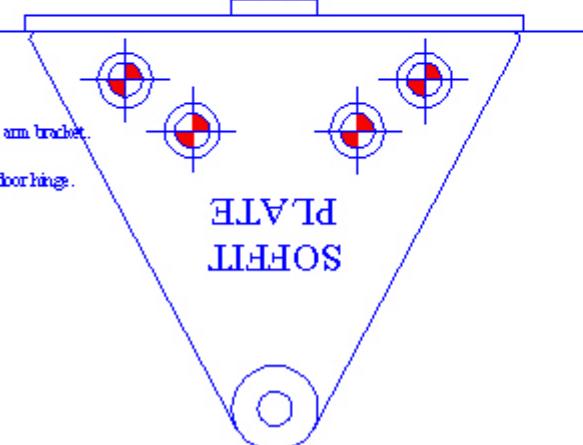

SWING FREE / HOLD OPEN


After switching on the 24vdc supply, open the door to the required position. The door will then operate as if there were no closer fitted. It may be opened or closed freely with no resistance. In the event of the electric supply being interrupted, the door will close from whatever position it was in.

NOTE:- To fit in hold open mode secure the hold open boss with the 2 small MS allen screws making sure they are very tight. To fit in the swing free mode you only fit 1 off MS allen screw in the position shown in the diagram i.e:- fit the screw into the nearest threaded hole to the hinge.

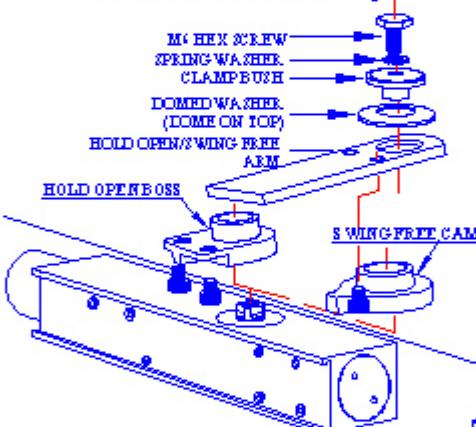**SWING FREE / HOLD OPEN**


After switching on the 24vdc supply, open the door to the required position. The door will then operate as if there were no closer fitted. It may be opened or closed freely with no resistance. In the event of the electric supply being interrupted, the door will close from whatever position it was in.

NOTE:- To fit in hold open mode secure the hold open boss with the 2 small MS allen screws making sure they are very tight. To fit in the swing free mode you only fit 1 off MS allen screw in the position shown in the diagram i.e:- fit the screw into the nearest threaded hole to the hinge.

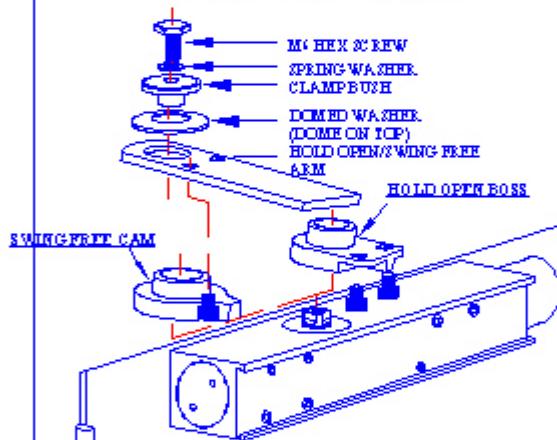


**PARALLEL ARM APPLICATION
FOR PUSH OPEN DOORS**
CAM SETTINGS FOR SERIES 600
HOLD OPEN / SWING FREE


LEFT HAND HINGE

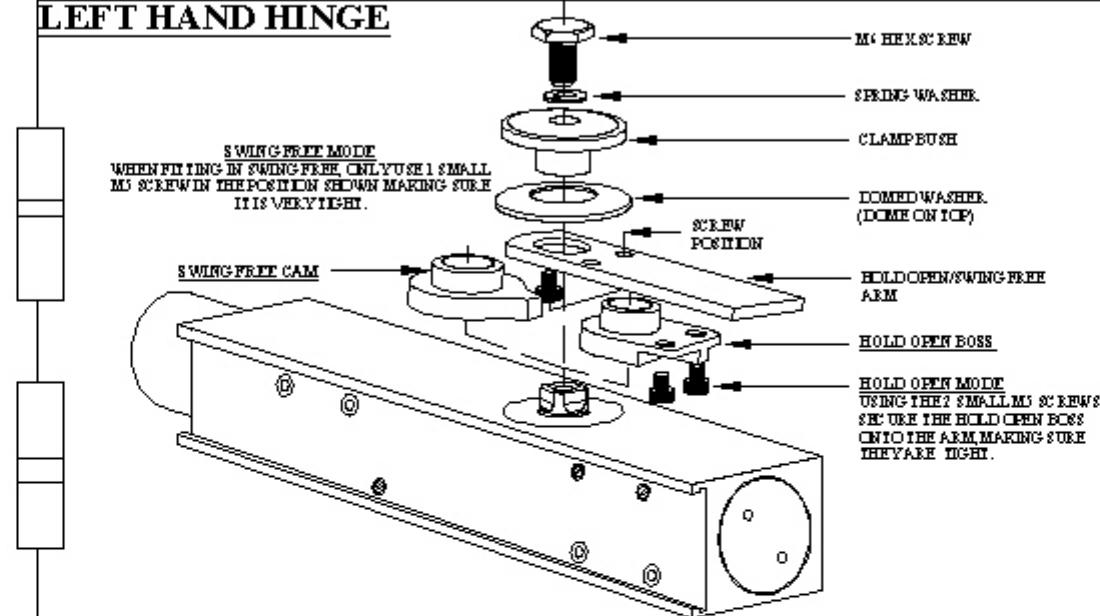

RIGHT HAND HINGE

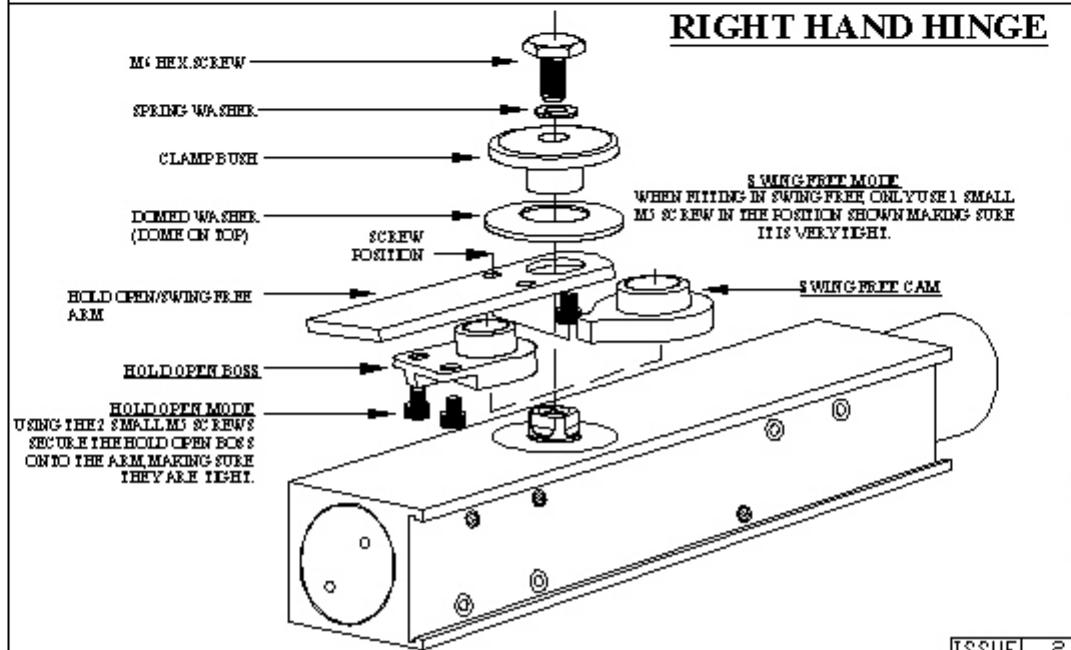

LEFT HAND HINGE

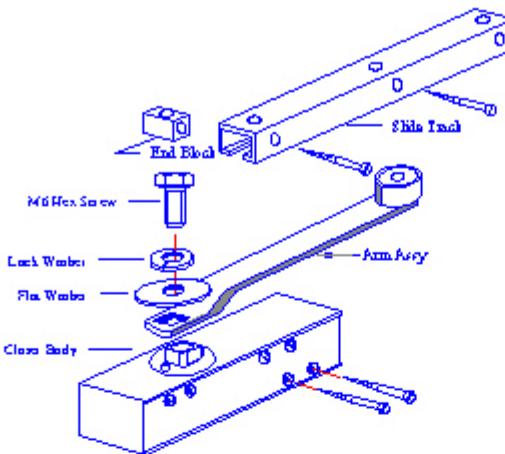**FIXING INSTRUCTIONS (FIG.1.)****PLEASE READ CAREFULLY BEFORE ASSEMBLY & FIXING.**

1. Using the template, drill holes ① and screw on the door closer body. Centre line of pinion should be 220mm from the door hinge.
2. At this point slide the plastic slider on the arm into the slide track channel.
3. Using the template, drill hole ② and screw on the slide track. Remember to fit end blocks and centre fixing screws. The End of track should be 120MM from the centre line of the door hinge and 22mm from the top of the closer body to the bottom of the track.
4. Using a 12mm open ended spanner on the bottom end of the pinion turn it to match the square on the pinion to the square on the arm, press arm on to the pinion.
5. Open the door a small amount to enable the arm to be bolted on to the closer using the special 6mm bolt.
6. Set door and latching speed.

When adjusting speed and latch do not unscrew from fully closed more than 1 1/2 turns.

THIS WAY UP FOR LEFT HAND HINGE

RIGHT HAND HINGE



220MM

120MM

THIS WAY UP FOR RIGHT HAND HINGE**24VDC WIRING INSTRUCTIONS****PLEASE NOTE THIS CLOSER IS 24VDC**

1. Screw the terminal box onto the door frame at approximately the same height as the closer body.
2. Holding the cover, carefully thread the 2 wires thru the hole nearest to the door hinge and secure the armored loop with the nut supplied.
3. Attach the 2 wires from the junction box (the wires you have just put thru the cover) to the 2 wires coming out of the coil at the back end of the closer (polarity is not important).
4. Connect your 24VDC supply to the switched junction box.
5. Switch the supply on and test. (Note : make sure the switch on the junction box is in the on position before testing).
6. Make sure when fitted in this mode your mode selection screw is unscrewed 1 1/2 turns from fully closed.
7. Periodic maintenance is very important, making sure body and arm are secure, and oiling the arm joints regularly.