

# RW1900-901APO **REACH Manual Call Point**

# QUICK START GUIDE





# THE BOX

# **INSIDE THE BOX**

# Product Part Number • 1 x Manual Call Point Product Description

- 2 x CR123A batteries
- 1 x Reset Key
- 2 x Screws
- 1 x Quick start guide

### **IMPORTANT TO CONSIDER**

When mounting a wireless device, a comprehensive radio survey should have been carried out to establish the location that provides the best coverage and optimum reach. Taking into consideration the building structure and materials, the survey identifies the wireless infrastructure required and product locations for optimum performance, identifying any factor that could prevent radio integrity.

Avoid fixing or mounting the unit close to the following:

- Equipment that utilises large electrical currents
- · Large metal objects or structures
- Fluorescent lighting fittings
- Metal ceiling structures
- IT cabling.

Keep 2 meters minimum spacing between other wireless equipment in the area to avoid signal interference.



EN54 approved environmental temperature range is -10°C to +55°C

## **UNBOXING**

- When unboxing the MCP you will find the unit and its backbox.
- This comes with pre-formed mounting holes to ensure ease of drilling.
- 2 screws are supplied to fix the backbox to the wall.


RW1900-901APO

Scan QR code for full user manual


For more information, please refer to the user manual. Available on apollo-fire.co.uk

# **MOUNTING STEPS**


Proceed as follows to complete the device installation.

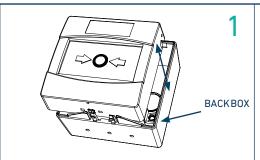


Remove the MCP front from the backbox using key provided.

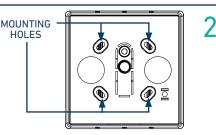


- Locate the mounting holes on the backbox and mark them using a pencil on the desired surface you are drilling.
- Using a suitable-sized drill bit (5.5mm) drill the marked screw points on your chosen surface.
- · Ensure you use the correct fixings for the type of surface you are mounting to.

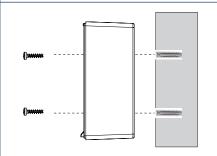


Screw the back box to the wall using all fixing holes and the supplied screws.

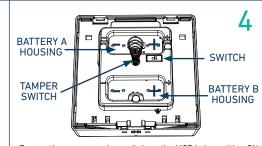

- Ensure the programming switch on the MCP is in position ON. Fit the 2x CR123A batteries ensuring you have checked
- they are the correct way round observing the polarity indications.

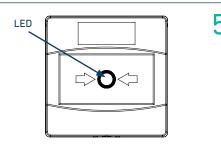

- . Observe the status LED on the front of the MCP: it will signal 4 times red.
- Move the programming switch in the MCP to position 1.
- The status LED will blink few seconds green and then signal alternatively green/red 4 times.

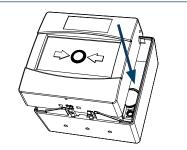

• Refit the MCP to the backbox, hooking it up from the top and pushing it towards the backbox.

Ó