

RW1000-600APO **REACH Optical Smoke Detector**

QUICK START GUIDE





THE BOX

INSIDE THE BOX

Product Part Number • 1 x Optical Detector Product Description

- with mounting base
- 2 x CR123A batteries
- 1 x Quick start quide

IMPORTANT TO CONSIDER

When mounting a wireless device, a comprehensive radio survey should have been carried out to establish the location that provides the best coverage and optimum reach. Taking into consideration the building structure and materials, the survey identifies the wireless infrastructure required and product locations for optimum performance, identifying any factor that could prevent radio integrity.

Avoid fixing or mounting the unit close to the following:

- Equipment that utilises large electrical currents
- · Large metal objects or structures
- Fluorescent lighting fittings
- Metal ceiling structures
- IT cabling.

Keep 2 meters minimum spacing between other wireless equipment in the area to avoid signal interference.



EN54 approved environmental temperature range is -10°C to +55°C

UNBOXING

- · When unboxing the detector you will find the unit and its mounting base.
- . This comes with pre-formed mounting holes to mount the detector base and a securing screw on the base to ensure there is no unwanted removal.




For more information, please refer to the user manual. Available on apollo-fire.co.uk


RW1000-600APO

MOUNTING STEPS


Proceed as follows to complete the device installation.

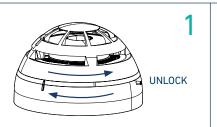


- · Remove the detector's dust cover, intended to protect the unit during shipping.
- Remove the detector from the base twisting anticlockwise.

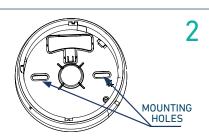


- · Locate the mounting holes and mark them using a pencil on the desired surface you are drilling.
- Using a suitable-sized drill bit (6 mm) drill the marked screw points on your chosen surface.
- Ensure you use the correct fixings for the type of surface you are mounting to.

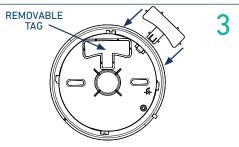


- A plastic pop out tag is removable from the base to enable you to label the address of the detector, prior to fixing to the ceiling: pop out the device label tag from the base and insert it into the side.
- Screw the base to the ceiling using all fixing holes and appropriate-sized screws.

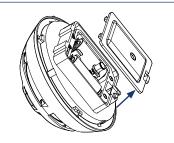

Remove the battery compartment cover on the base on the detector

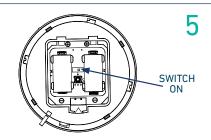

Ensure the programming switch in the base of the detector is in position ON.

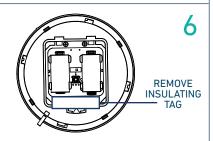

Remove the batteries' insulating tab ensuring the batteries are kept in their lodgement.



RW1000-600APO REACH Optical Smoke Detector



QUICK START GUIDE

